



THE SPECIFIED FLASHINGS ROOFERS *CHOOSE* TO USE!

INSTALLATION INSTRUCTIONS


S SERIES

ALL S SERIES FLASHINGS

ONE-PIECE / SLIPCOVER


INSTRUCTIONS S SERIES

1. SLIDE BASE STACK FLASHING OVER PENETRATION.
2. INSERT BACKER ROD BETWEEN PENETRATION AND FLASHING. PUSH DOWN APPROXIMATELY $3/8''$ TO FORM A POCKET.
3. APPLY URETHANE SEALANT INTO FORMED POCKET AND TOOL FOR POSITIVE RUNOFF.
4. POP RIVET SEALANT COVER TOGETHER DIRECTLY ABOVE SEALANT AND APPLY ANOTHER BEAD OF SEALANT AROUND THE TOP AND TOOL.

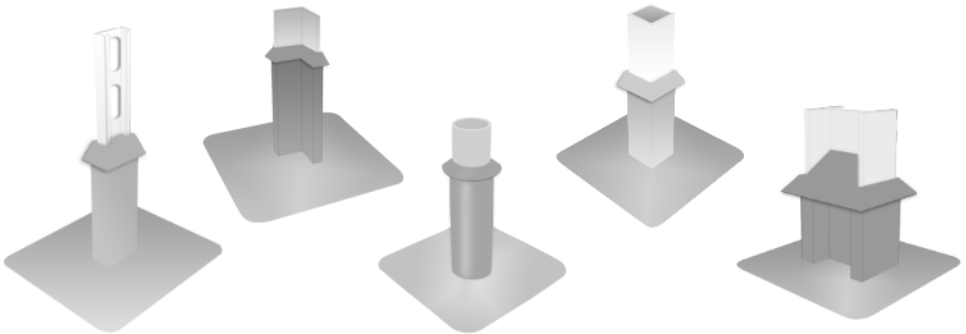

NOTE:

ROOF PREPARATION PRIOR TO SETTING **SBC** ROOF PENETRATION FLASHINGS ON ROOF, PRIMING, AND STRIP FLASHING AFTER SHOULD BE IN STRICT ACCORD WITH MEMBRANE MANUFACTURER'S SPECIFICATIONS.

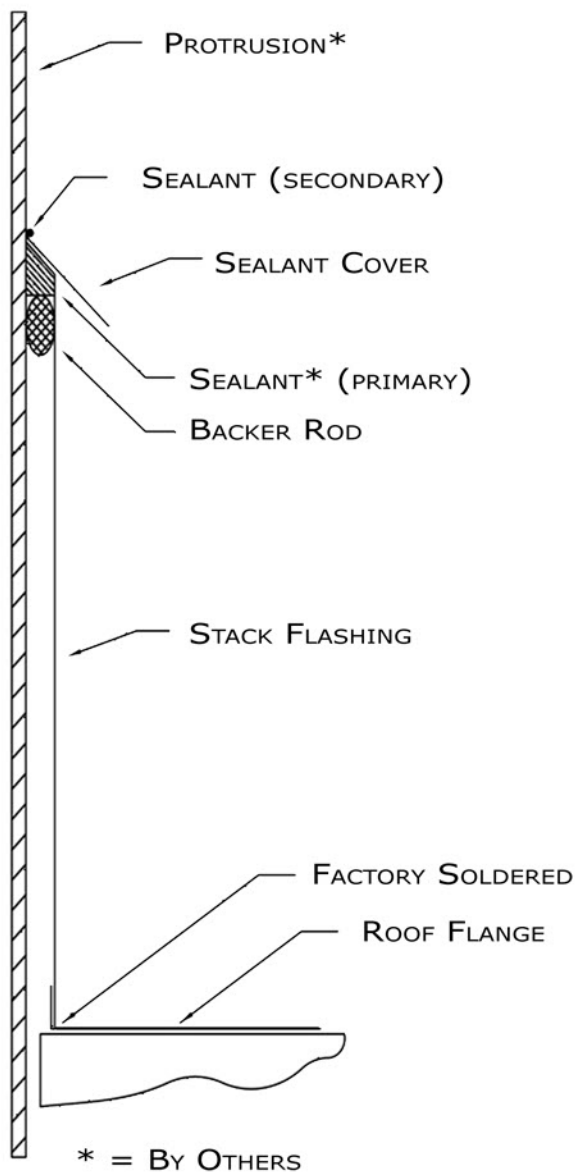

LIMITED WARRANTY

EXPRESS WARRANTY:

SBC INDUSTRIES EXPRESSLY WARRANTS THAT ALL MATERIALS WILL BE IN ACCORDANCE WITH SBC INDUSTRIES SPECIFICATIONS.

FURTHERMORE, SBC INDUSTRIES EXPRESSLY WARRANTS THAT ALL PRODUCTS WILL BE MANUFACTURED TO DIMENSIONS AND CONFIGURATIONS AS ORDERED BY BUYER.

DISCLAIMER:

SBC INDUSTRIES MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESSED, OR IMPLIED.

REMEDIES:

BY ACCEPTANCE OF ANY PRODUCT MANUFACTURED BY SBC INDUSTRIES, BUYER AGREES THAT THE SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY AS STATED ABOVE SHALL BE LIMITED TO THE REPLACEMENT OF ANY NONCONFORMING PRODUCT WITH A CONFORMING PRODUCT.



1765 OPA LOCKA BLVD

MIAMI, FL 33054

PHONE 800.228.2580

FAX 305.685.6360